



Golf Buddy *WT3*

# Golf Buddy *WT3*

User Manual



# CONTENTS

1. GETTING STARTED
2. BASIC OPERATION
3. ADVANCE OPERATION

GolfBuddy *WT3*

**Golf** Buddy *WT3*



Thank you for choosing Golf Buddy.


The GolfBuddy WT3 will provide you with the most accurate course information to ensure you the very best golf experience.

## Button Overview



 Power / ESC

 Menu / Select

 Up / Mark

 Down / Score card

## © Watch Mode Screen








 


 















1. Time
2. Day
3. Date
4. Battery Indicator


 





















## © Play Mode Screen



1. Hole Number
2. Left/ Right Green
3. Par info
4. Meter (In Yards if not indicated)
5. Battery Indicator
6. Dynamic Green View
7. Distance to the center of the Green.
8. Distance to the back of the Green.
9. Distance to the front of the Green.

## Target Icon Information

	50Meterpost		250Meterpost		Trees
	50Yardpost		250Yardpost		Bush
	100Meterpost		Left Bunker		Rough
	100Yardpost		Right Bunker		Short Tree
	150Meterpost		Bunkers		Hole
	150Yardpost		Fairway		Out of Bound
	200Meterpost		Garden		OB + Tree
	200Yardpost		Tree		OB + Rock

	OB + Bunker		Hill		Bridge
	Sand Box		Right Dogleg		Beach
	Target		Left Dogleg		Cliff
	Rock		Fence		Pond
	Downhill		Cave		Cart Path
	Uphill		Windmill		Stump
	Water		Tower		Pole
	Wall		Creek		

Golf Buddy <sup>WT3</sup>

## 1. GETTING STARTED





## GETTING STARTED

### 1.1. Power On/Off

Press and hold the  button to turn on/off the device.







### 1.2 Charging



You can charge the device by inserting the device into the charging dock as depicted in the picture below. The battery indicator will display  while charging and will display  when fully charged.

 


### 1.3. Time Setting


Time will set automatically after WT3 successfully connects to the satellite. To set the clock manually, press and hold the  button then press the  button to confirm.

\* DST : Daylight Savings Time can be applied by pressing the  /  button in the Time Setting Menu.

\* 12/24 Hour Time Format : 12/24 Hour Time Format can be applied by pressing the  /  buttons in the Time Setting Menu.

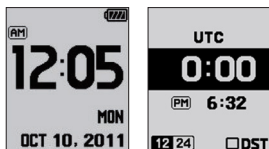




### ■ Sun Rise/ Sun Set Time

Press the  button to view the Sun Rise/ Sun Set Time. (only applicable when WT3 is connected to the satellite)



 


### ■ Stop Watch

Press the  button twice to use the Stop Watch Function. Press the  button to start/ stop the Stop Watch, and press the  button to reset the the record.





### 1.4. Main Menu

Press and hold the  button to view the Main Menu and it can be navigated by using the  /  button.



#### ■ Switching to Play Screen

Press and hold the  button from the default screen then select the  icon to switch to the play screen. After WT3 connects to the satellite, it will recognize the nearest Golf Course and provide the Course/Hole information.



Golf Buddy <sup>WT3</sup>

## 2. BASIC OPERATION



## 2.1. Play Screen Information




### ■ Distance to the Green

Play Screen provides the distance to the center, back, and front of the green.




### ■ Time



Press the  button to view the current time while displaying the distance to the center of the green.



### ■ GPS Tracking

Press the  button twice to view the GPS tracking while displaying the distance to the center of the green.

## 2.2. Target/Hazard Information

Press the  button to view the Target/Hazard information and press the  button again to go back to the Play Screen.



## 2.3. Setting

Press and hold the  button for the menu.



**H04L** Hole Selection/ Left & Right Green Selection



 

**YM** Yard / Meter

 Previous Hole Selection

 Pin Placement

 Exit




### ■ Hole Selection/ Left & Right Green Selection

Navigate by using the  /  buttons and press the  button to select the Hole. Select between left/right green then press the  button to complete the selection.






## BASIC OPERATION

### ■ Previously Recognized Hole Selection

Previously recognized hole can be selected by using the  /  button then press the  button to complete the selection.



### ■ Switching between Yard / Meter

Yard/ Meter can be selected by using  /  buttons then press the  button to complete the select.





 


Golf Buddy <sup>WT3</sup>




### 3. ADVANCE OPERATION



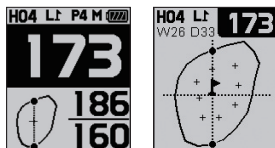


### 3.1 Dynamic Green View / Pin Placement





#### ■ Dynamic Green View

 
Press the  button or press and hold the  button then select the icon  to proceed to the Dynamic Green View. Dynamic Green View will allow you to always get the Front/ Center/ Back distance to the green from your angle of approach.

#### ■ Pin Placement






You may also change the Pin placement by using the  /  buttons then press the  button to go back to the Play Screen.
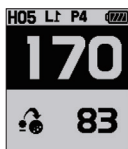
### 3.2. Measuring Distance

Press and hold the  button to start measuring then press the  button again to finish and view the measured distance.








### 3.3. Recording Scores

Press and hold the  button while on the Play Screen to start access the Score Tracking Module. You can navigate and record your scores by using the  /  buttons then press the  button to complete the recording. Press and hold the  button anytime to go back to the Play Screen.




H01	P4	-
H02	P3	-
H03	P5	-
0	(0)	

### 3.4. GPS Tracking



While on Watch mode screen, press the  button then select the  icon. Press the  button to start the recording and press the  button to delete the record. Press the  button to switch between Yard / Meter.



#### ※ HOW TO RESET

To reset the device, press the  /  /  buttons at once to restart the system.

#### ※ HOW TO VIEW DEMO

To view demo when the GPS satellite signal cannot be reached indoors, select Play mode and the satellite reception screen will appear. Press and hold  /  buttons at once.